
OMCR Command Reference

Configuration Commands

Refer to the 7x50 SR OS Basic System Configuration Guide for information about redundancy CLI command descriptions and syntax.

```
config
  — redundancy
    — multi-chassis
      — [no] peer ip-address
        — warm-standby
```

